Mini Mover Conveyors

Belt Direction Quick Guide

PULL configuration

STANDARD CONFIGURATION

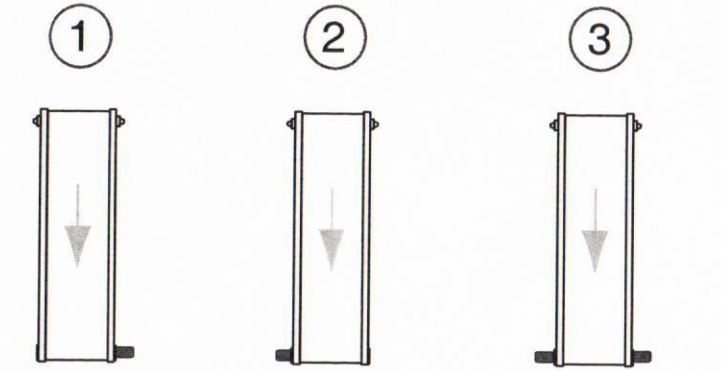

Arrows show direction of belt travel

PULL configurations: Full load capacity is delivered
Belt is pulled toward the gearmotor

PUSH configuration

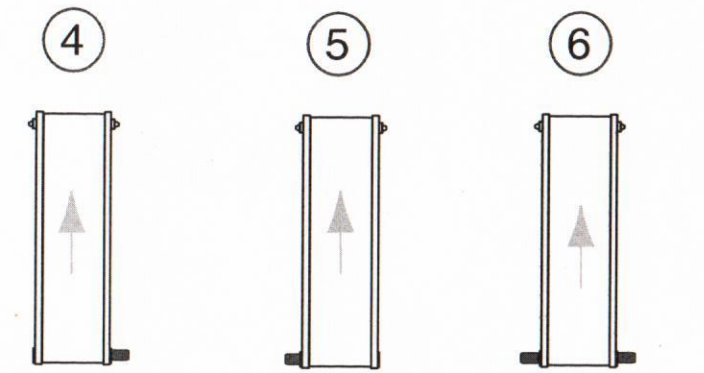

Arrows show direction of belt travel

PUSH configurations: Load capacity is reduced by 50% or more
Belt is pushed away from gearmotor