
BRYANT CONTROL INC.
2933 N. WEBSTER AVE.
INDIANAPOLIS, IN 46219

www.bryantcontrol.com


PHONE (317)549-3355
(800)234-2857
FAX (317)542-8154

TYPICAL WIRING DIAGRAMS FOR INSTALLATION OF LM1 "LEVEL MASTER" BOWL LEVEL CONTROL

VIBRATORY HOPPER APPLICATION

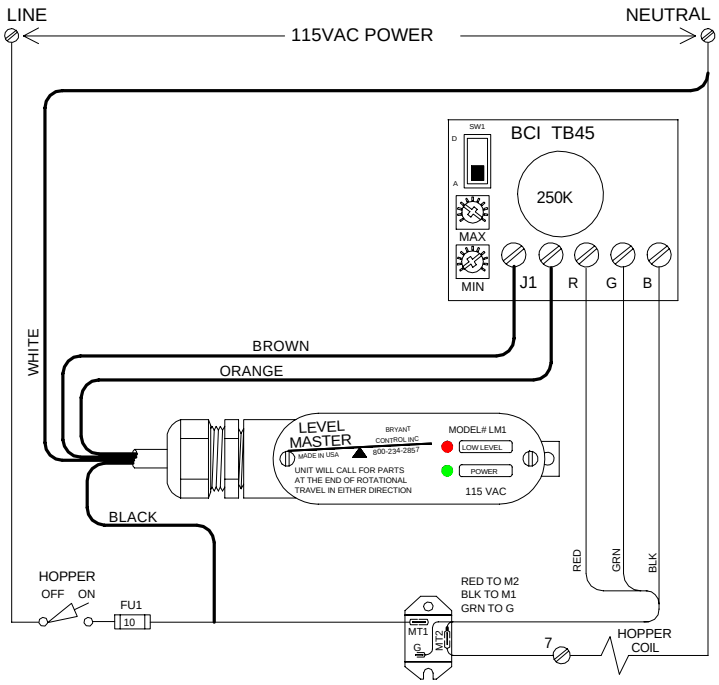

DC MOTOR CONTROL APPLICATION

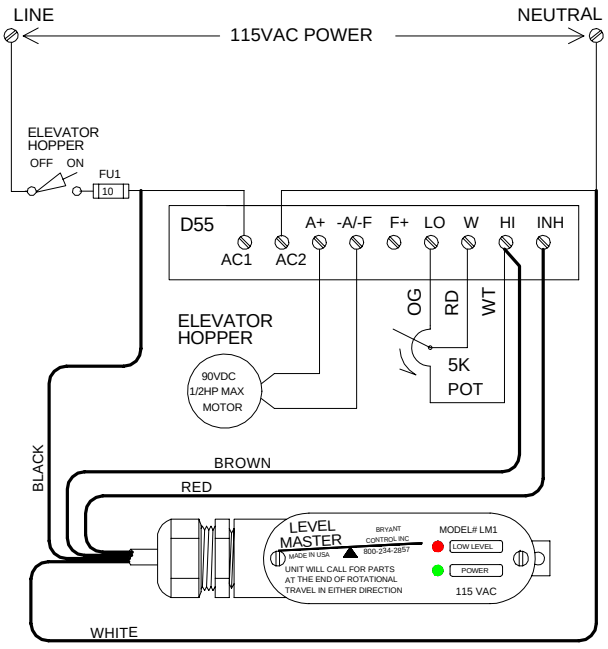

WARNING: Black lead must be connected to FUSED power.

DUAL DELAY JUMPER SELECTION:

1) DISCONNECT POWER!!
2) REMOVE COVER AND CIRCUIT BOARD
3) LOCATE JUMPER BANK SHOWN BELOW
4) MOVE JUMPER TO DESIRED DELAY OF 0, 1, 2, 4, OR 8 SECONDS
5) REPLACE BOARD AND COVER

